


Installation & Operating Guide


FC811/VFC811 : 8 port fiber-cut switch

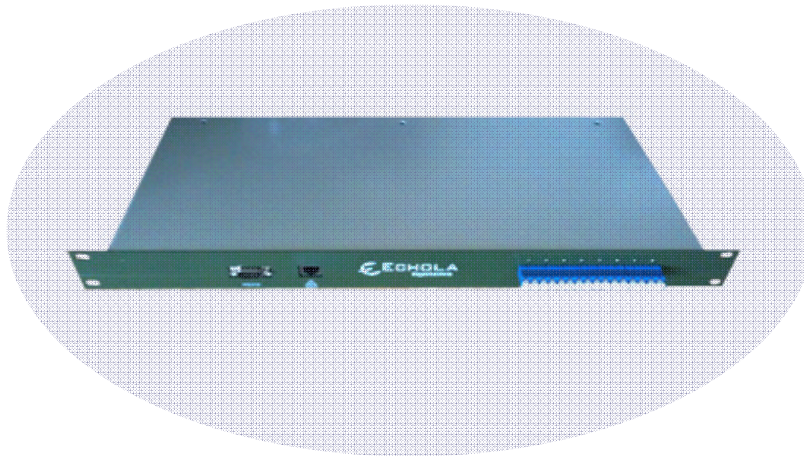

Echola Systems L.L.C
1161 Ringwood Ct, Ste 100
San Jose, CA-95131
Phone: 408 321 9663
Fax: 408 321 9663
<http://www.echola.com/optical>


Installation


FC811 is a Linux based 8 port fiber cut switch with eight 1x1 physical layer (L1) optical switches. You can either use 8 single fibers or 4 duplex fibers (Tx/Rx combo) to simulate fiber cut scenarios.

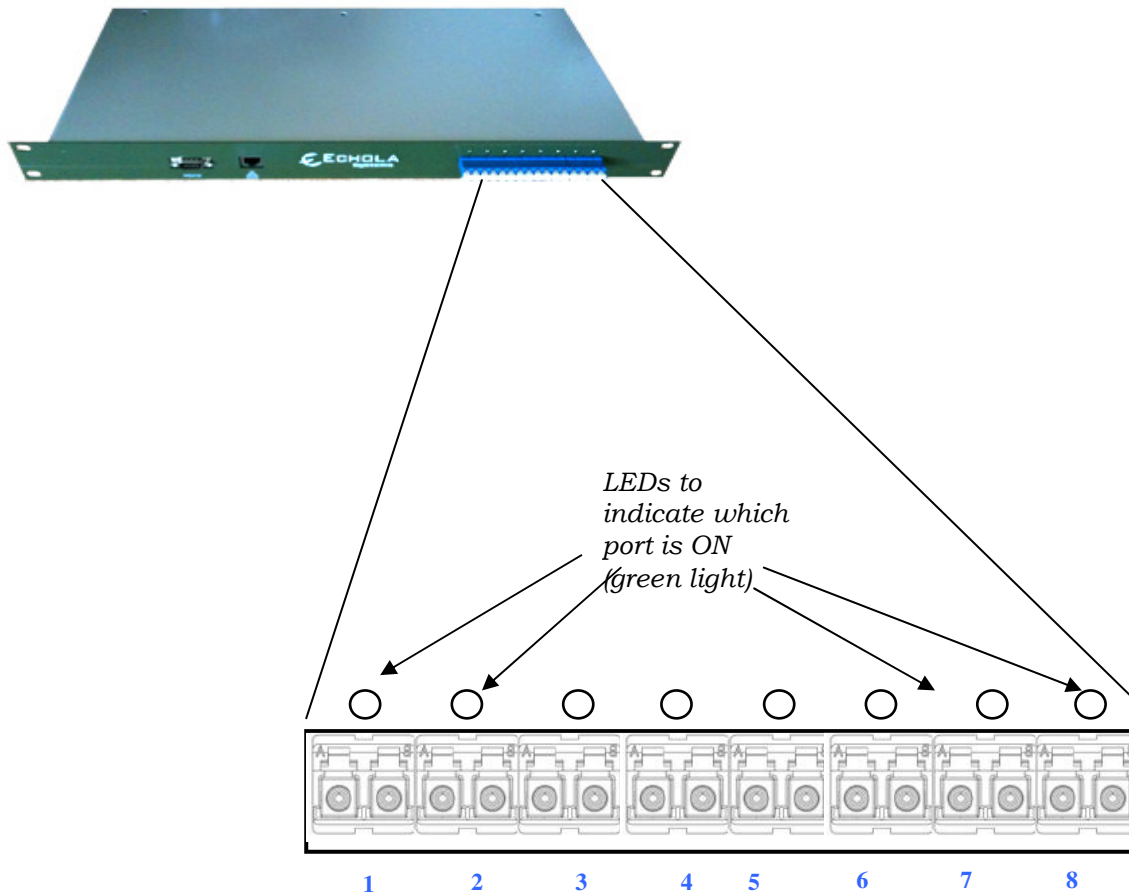

Connecting test equipment to FC811

Suppose if you want to simulate fiber cut scenario between 2 optical devices.



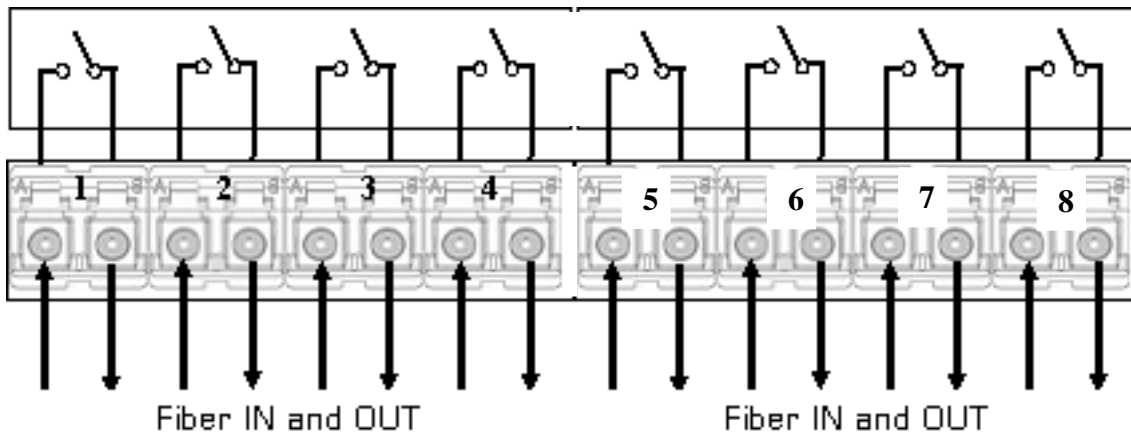

(Each LC connector of FC811 has two input/outputs marked as B and A.)

Then you need to disconnect the fiber connecting these 2 devices which are under test and connect them through FC811 ports, between A and B like the following,

Device1-TX -> {Port1B -> [FC811 SWITCH_PORT1] -> Port1A} -> Device2-RX

If you want to simulate break between both TX and RX fibers of the these devices under test (which may be the case in many scenarios) then you will have to use 2 ports of FC811, like the following

Device1-TX -> {Port2B -> [FC811 SWITCH_PORT1] -> Port2A} -> Device2-RX

Device1-RX <- {Port1B <- [FC811 SWITCH_PORT2] <- Port1A} <- Device2-TX

UPSR, 2F-BLSR protection ring testing may require 2 FC811 ports while 4F-BLSR might require 4 ports.

Configuring FC811

FC811 provides a serial (RS232) and an Ethernet (10/100) port connectivity for management. Serial port is only used in special situations such as to debug network connectivity if FC811 is not reachable through Ethernet.

You might require a Laptop or a PC to configure FC811 with an IP address before connecting to your network. You can use either serial or Ethernet port to configure IP. If you use serial port using supplied null modem cable then you would need to configure serial for **38400 baud rate with 8-N-1** to access FC811. If you use Ethernet then you would need to configure the PC or Laptop's IP to match FC811's default network. The default network configuration and Login information is as follows

IP Address: 10.1.1.100
Mask: 255.255.255.0
Gateway: 10.1.1.1
DNS: 10.1.1.1

“root” password: osctl

Other non-root default user:

Username: osctl
Password: osctl

Configuring Static IP

Use “osctl” command to configure a static IP address after login as “root” user. “osctl -?” shows detailed osctl command options with examples.

```
# osctl -i 192.168.1.10 -m 255.255.255.0 -g 192.168.1.1
```

The above command configures IP address of FC811 as 192.168.1.10 with mask 255.255.255.0 and gateway & DNS as 192.168.1. Once the IP is configured from a PC or a Laptop using Ethernet or serial port, you can then connect FC811 to your network and access it using “telnet” or “ssh”.

Configuring Dynamic IP

If you have a DHCP server running on your network and you may want to dynamically assign an available IP address to FC811 by using following option.

```
# osctl -D
```

Make sure you know the assigned IP address to login using “telnet” or “ssh”.

Configuring Hostname

You can also change the hostname of FC811 switch using “osctl”.

```
# osctl -h FC811-SW-1
```

The above command changes hostname of FC811 to FC811-SW-1.

Configuring DNS/Nameserver

To configure a DNS or Nameserver, you can use “-n” option of osctl.

```
# osctl -n 192.168.1.11
```

Configuring Syslog Server

To send system generated events to an external syslog server, use “-S” option of osctl. You have to specify the address of the syslog server which will receive these event logs. (Note: this option only available in software version 2.0 and above).

```
# osctl -S 192.168.1.200
```

Version Info

The following command shows hardware and software versions and serial number of the switch.

```
# osctl -v
```

Other Administrative commands

Most of other administrative functions can be done using standard Linux commands. For example, to change the password use “passwd” command from the Linux prompt and to add new user use “useradd” command. You have to be “root” user in order to add a new user.

Operation

To simplify the operation, all functions are provided in a single command called “osctl”. osctl provides 3 major functions

1. Network & Host configuration (allowed only in “root”)
2. Switch Control & Status
3. Port group Management

Network & Host configuration

The following are the commands used to configure network.

1. To configure static IP
osctl -i <ip> -m <mask> -g <gw>
2. To use DHCP (dynamic IP)
osctl -D
3. To configure hostname alone
osctl -h <hostname>
4. To configure a DNS or Nameserver, you can use “-n” option of osctl.
osctl -n <dns_server_ip>
5. To configure syslog server to receive FC811’s events
osctl -S <syslog_server_ip>

For details refer to installation section as these are explained in that section.

Switch Control

In order to switch ON or OFF particular a port or ports or a group you can use following command.

```
$ osctl -p {<port#/s> | <port_range> | <port_group>} <on|off> [-t <secs>]
```

Note that the “{}” (braces) groups options and “|” is equivalent to “or”. If the options are in square brackets “[]” then it is optional. Wherever you see port# or in_port# they all the same and represents one of 8 ports of FC811.

For example:

```
$ osctl -p 4 on
```

➔ switch port 4 to ON. LED on port 4 of FC811 lids when this command is issued which confirms that the port is switched ON.

```
$ osctl -p "1 2 3" on
```

→ switch ports 1, 2 and 3 to ON. Note the double quote, without that it won't work.

\$ **osctl -p "1-4" off**

→ switch ports 1, 2, 3 and 4 to OFF (range 1 to 4). This comes in handy when you want to switch bunch of ports in order.

\$ **osctl -p gp1 off**

→ switch all ports in group "gp1" to OFF. You will have to create group before using it with "-c" option as explained in "Group Management" section.

\$ **osctl -p 2 off -t 120**

→ switch port 2 to OFF after 120 **secs** (delayed switching)

\$ **osctl -p 2 off -T 120**

→ switch port 2 to OFF gradually with in 120 **milliseconds**. *This option is only available with VFC series switch.* It is different from above delay where the switching happens almost immediately *after 120 secs of wait* but in this case switching takes 120 milliseconds to come to completely OFF state to simulate real world fiber cuts. Default is 10 *milliseconds*.

Switch Status

Following command shows the status of a port whether it is on/off or status of ports in a pre-defined group.

```
$ osctl -s [<port_group> | <in_port#>]
```

For example:

```
$ osctl -s
```

➔ shows all ports' & groups' status as follows. It shows first all ports and tells you which ports are part of a group.

All Ports Status

```
=====
Port   | Port Status
=====
1      | off
2      | off
3      | off
4      | off
5      | on
6      | on
7      | on
8      | on
-----
```

Group Status

```
=====
Group Name | Port Status
=====
gp1       | off
-----
```

Group's Port Details

```
=====
GroupName: <gp1>
Port Status: off
Ports in the group: 1 2 3 4
-----
```

```
$ osctl -s gp1
```

➔ shows group "gp1" status only. You will have to create group before using it with "-c" option as explained in "Group Management" section.

```
$ osctl -s 2
```

➔ shows port 2 status only

Port group Management

Port group management commands provide convenience of switching bunch of ports together identified by a name. Group name can be any alpha-numeric name. Group name can not be just a number or start with a number. For example group name can not be "10" or 10gp1.

1. To create a new group
`$ osctl -c <port_group> {<in_port#/s> | <inport_range>}`
2. To update existing group
`$ osctl -u <port_group> {-a | -r <in_port#/s>}`
3. To delete a group
`$ osctl -d <port_group>`
4. To delete all groups
`$ osctl -R`
5. To list ports in a group
`$ osctl -l [<port_group> | <in_port#>]`

For example:

```
$ osctl -c gp1 "1 3 4"
```

➔ creates group named "gp1" with ports 1,3 and 4. The double quotes around space separated port numbers are required. Note that when you create a group, all the ports in the gp1 will be in OFF state by default.

```
$ osctl -c gp2 "5-8"
```

➔ creates group named "gp2" with ports 5,6,7 and 8 (5 to 8 range)

```
$ osctl -u gp1 -a "5 6"
```

➔ adds ports 5 & 6 to existing group gp1

```
$ osctl -u gp1 -a 7
```

➔ adds port 7 to existing group gp1

```
$ osctl -u gp1 -r "2 4"
```

➔ removes ports 2 & 4 from group gp1

```
$ osctl -d gp1
```

➔ deletes group gp1 and release all ports which were part of the group.

```
$ osctl -l
```

➔ lists ports in group, like

```
GroupName: <gp1>
```

```
Ports in the group: 1 2 3 4
```


```
$ osctl -R
```

→ delete all groups in the database.

Web interface

In order to access FC811 Web interface you will have to use its IP address in URL address bar of the web browser. The web interface is included in software version 2.2 and above. The first page you will see is the management page where you control all ports.

Following screen shot shows how GUI for fc811 looks like...

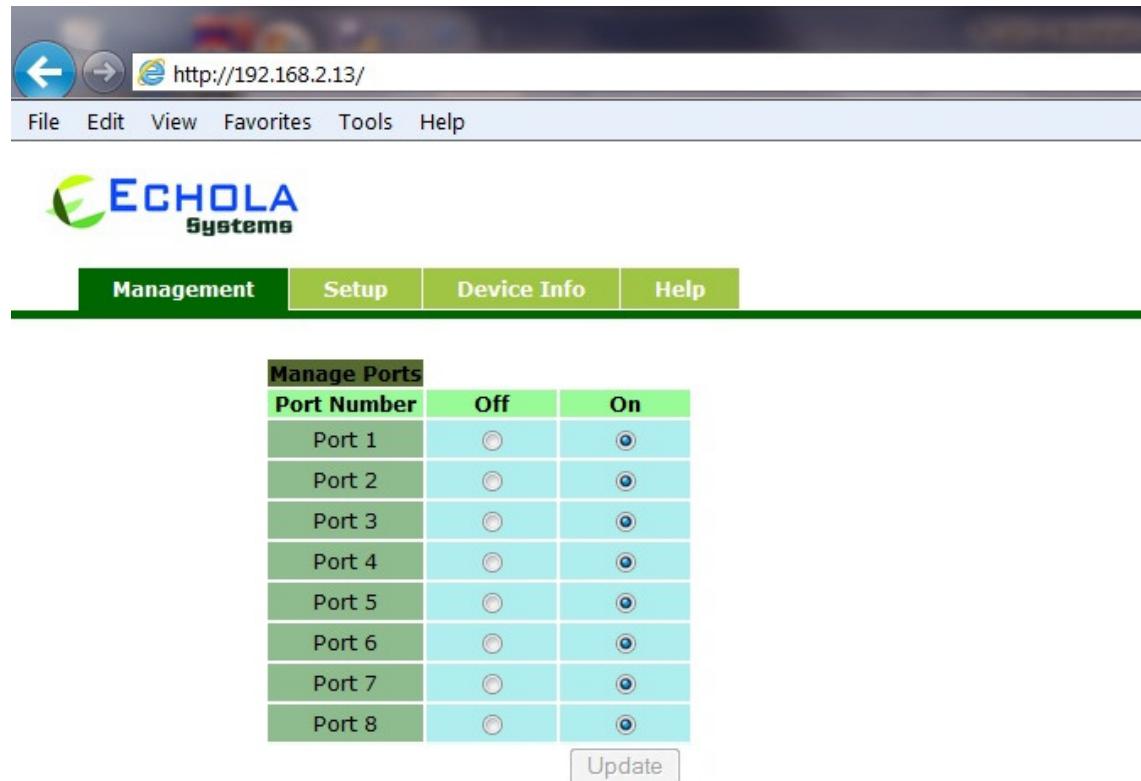

Network Setup

Host Name	localhost
IP Address	192.168.2.99
Mask	255.255.255.0
Gateway	192.168.2.1
Enable DHCP	<input checked="" type="checkbox"/>

Web interface has a main menu tab with following pages...

[Management page](#)

The management page for FC811 is a simple page with 8 pull down menu to choose ON or OFF state. Initially it shows the current status of ports and once you change the status to ON or OFF by clicking on corresponding pull down menu and then Update button to switch corresponding port to ON or OFF.

[Setup page](#)

Setup page allows you to change Hostname, Static IP address configuration and Dynamic IP (DHCP). Initially it shows the current set values. You can change them by clicking on the corresponding field. Note that the changing IP, Gateway, Mask or DHCP setting would make switch to **reboot!**.

[Device Info page](#)

Device Info page shows hardware and software information such as model and version.

[Help page](#)

This page displays user's manual.

Automating Echola's Optical Switches

In order to automate Echola's Layer 1 switches you would need to write Tcl/Expect based scripts or Perl/Xml based scripts (both example scripts are given below). The tcl and expect scripting languages are easy to learn. We have given an example script written for fc811/FC811 at the end which you can modify to suit your need. There are tons of online sources for learning tcl & expect. The following provides quick high level overview of tcl and expect <http://cplug.org/t/uploads/2009/02/tcl-expect.pdf>. There is a good book from O'Reilly which provides great insight into expect language itself: "Exploring Expect: A Tcl-based Toolkit for Automating Interactive Programs (Nutshell Handbooks)".

Running scripts from Unix/Linux systems

If you want to run the script from a Unix/Linux based machines then there is possibility that you may be already having these tools on your system. Check if it's already been installed by typing "expect" from Unix/Linux prompt. If it is not then you will have to install it using package install tool for that particular flavor of Unix/Linux. For instance, on Fedore core Linux, you can use "yum install tcl expect" to install tcl and expect.

Running scripts from Windows

For windows based systems you can install windows free community version of ActiveTcl from Activestate <http://www.activestate.com/activetcl/downloads>. The expect is not available yet for 64bit version of Windows 7/Vista. So you will need to download 32bit version for ActiveTcl first and then make sure to install "expect" using command "teacup install Expect".

Also you need to enable "telnet" client on Windows before running any scripts. In order to enable telnet on Windows follow these steps

- ➔ Start
- ➔ Control Panel
- ➔ Programs And Features
- ➔ Turn Windows features on or off
- ➔ Check Telnet Client
- ➔ Hit OK

After that you can start Telnet via Command Prompt to check if it works.

The following sample script actually login into FC811/fc811 switch and issue a switch command then check whether the switch command was successful and return the result before terminating the telnet session. This script takes argument (port number and state of the port (on/off)) from commands line argument. Cut and Paste the following script on to any editor and save as "rosctl". Then you can run the script by issuing `rosctl -p <port#> on|off`. For instance, to switch port 2 to ON, you can call script as `rosctl -p 2 on`. Make sure you have proper path set for expect on first line "#!/usr/bin/expect" for Unix/Linux based systems. For windows you will have to uncomment 'exec'

and 'package' commands as mentioned in the script. All comments inside '#' provide more info on what the script is doing.

Sample Tcl/Expect script

```
#!/usr/bin/expect
#####
# This script switches the given port and verifies if the port is switched from a remote machine
# Command Usage: rosctl -p <port#> on|off
#####
# For windows uncomment following
# exec tclsh "$0" ${1+"$@"}
# package require Expect

# Check number of arguments passed to this command if < 3 then spit out error & exit

if { $argc < 3 } {
    puts "Usage: rosctl -p <port#> on|off\n"
    exit 1
}

# Set telnet host, username, password and other parameters, modify these to reflect your setup

set hostname "192.168.2.20"
set username "osctl"
set password "osctl"
set prompt "osctl@.*\$"
set port [lindex $argv 1]
set status [lindex $argv 2]
set commandcontrol "osctl -p $port $status"
set commandstatus "osctl -s $port"

# Display info.

puts "Connecting to $hostname."

# Connect to the telnet server using the "spawn" command.

spawn telnet $hostname
#spawn C:\Putty\putty.exe -telnet $hostname

# Wait for a login prompt.

expect -re "(Name|login|Login|Username).*:.*" {

    # Login prompt received. Send user name to fc811/FC811.

    send "$username\r"

} eof {

    # No login prompt received. Display an error.
```



```

    puts "could not connect\n"
}

# Wait for a password prompt from the Unix server.

expect "Password:" {

    # Password prompt received. Send the password.

    send "$password\r"
}

# Wait for the switch prompt.

expect -re $prompt {

    # Issue osctl command to switch given port

    send "$commandcontrol\r"
}

# Wait for the switch prompt again to check status.

expect -re $prompt {

    # Issue osctl command to check status

    send "$commandstatus\r"
}

# Discard echoed command - we need only the status

expect "$commandstatus\r"

# Discard unwanted prompt as well

expect -re "(.*)$prompt"

#Debug
#puts "\nGOT*****$expect_out(buffer)*****\n"
#puts "\n GOTS #####$expect_out(1,string)#####\n"

# Save remaining to buffer 'data'

set data $expect_out(1,string)

# Check return status and display result accordingly
switch -re $data {
    "off" { puts "Port $port is OFF" }
    "on" { puts "Port $port is ON" }
    default { puts "Port $port status is unknown" }
}

```

```
}
```

```
# Terminate telnet
```

```
send "exit\r"
```

Sample Perl/xml script

```
#####  
#####  
# Command Syntax: osctlauto.pl http://<ipaddress> <port#> <on|off> #  
#####  
#####  
use LWP::UserAgent;  
use XML::Simple;  
  
$IPADDR = shift;  
$PORT = shift;  
$STAT = shift;  
  
# create objects  
$xml = new XML::Simple;  
$ua = LWP::UserAgent->new;  
  
# set status on/off  
  
$REQUEST=$IPADDR . "/xmlapi/setstatus.php?port=" . $PORT . "&" . "status=" . $STAT;  
#print "REQUEST: $REQUEST\n";  
$req = HTTP::Request->new(GET => $REQUEST);  
$req->header('Cookie' => 'test=quest');  
$res = $ua->request($req);  
  
# check status  
  
$REQUEST=$IPADDR . "/xmlapi/getstatus.php?port=" . $PORT;  
print "REQUEST: $REQUEST\n";  
$req = HTTP::Request->new(GET => $REQUEST);  
$req->header('Cookie' => 'test=quest');  
$res = $ua->request($req);  
$data = $xml->XMLin($res->content);  
  
#print status  
  
print "STATUS = $data->{status}\n";
```

Troubleshooting

- ➔ If you use telnet and is very slow, it could be due to name server / DNS issue. Make sure you have name server configured correctly (-n option). Try “ping <name_server_ip>” to see if name server configured can be reached from fc811. If you don't have dns on your network then you can just remove file “/etc/resolv.conf” and see if it works normal.
- ➔ All the group information is stored in a hidden XML database file. If for some reason this file is corrupted, the system will recover from this error by trying to copy the backup database file. If this happens it will throw a warning message but it is not guaranteed that all the group information will be restored correctly. In that case you may need to recreate missing groups.
- ➔ For adding new users you can use Linux's “useradd” command. You have to be “root” in order to add new user to the system.

Hardware Specifications

Electrical	
Input Power	100-240 AC
Total Power Consumption	< 7 Watts
Serial Port	1x RS232
Networking	1x 10/100 Ethernet
Optical Specification for FC Series	
Connectivity	16 duplex LC connectors
Data rate	Any data rate - Physical Layer Switch, no limitation
Wavelength (nm)	Multimode version: 850/1310 nm Singlemode version: 1280-1625 nm
Optical Technology	1x1 Electro-mechanical-optical switch
Insertion Loss (dB)	0.5 Typical, 0.8 Max. (without connectors)
Switching Time (ms)	≤ 10
Crosstalk (dB)	≤ -80
Repeatability (dB)	≤ 0.1
Optical Specification for VFC Series (SM)	
Connectivity	16 duplex LC connectors
Data rate	Any data rate - Physical Layer Switch, no limitation
Wavelength (nm)	1310±50nm & 1550±50nm
Optical Technology	MEMS VOA
Insertion Loss (dB)	< 0.8 dB. (without connectors)
Switching Time (ms)	≤ 5
Crosstalk (dB)	≥ 65
Attenuation Dynamic Range (dB)	> 30
Attenuation Resolution (steps)	256 steps
Optical Power Handling (mW)	≤ 250mW/channel
Environmental	
Operating Temperature (°C)	-5 ~ +75
Storage Temperature (°C)	-40 ~ +85
Relative Humidity Range (%)	0 ~ 85

Contact Info

If you have any technical questions and need help you can send email to support@echola.com or call us at 408-321-9663 ext 2. You can also download latest documents and software from our website www.echola.com/optical.